



**RUBBER WHEELS
FOR SEEDERS
MACHINERY**

RUBBER WHEELS for SEEDERS PRODUCTION





Rubber Wheels for Seeders machinery





RUBBER WHEELS FOR SEEDERS MACHINERY

CODE R420X100LFF200022

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	100	40	20,00	8,10



CODE R400X115FF1620020

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,20	7,40



CODE R400X115FF1680021

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,80	7,40



CODE R400X1151620010

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,20	9,80



CODE R400X1151680011

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,80	9,80



CODE R400X115168001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,80	7,00

CODE R400X115162002

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,20	7,00

CODE R400X115T1590010

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	15,90	7,00

CODE R400X115168003

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,80	7,00



CODE R400X115162004

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,20	7,00



CODE R400X115168008

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,80	10,70

CODE R400X115162009

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,20	10,70

CODE R400X65168005

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	65	40	16,80	6,00

CODE R400X65162006

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	65	40	16,20	7,00

CODE R325X50168001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
325	50	40	16,80	2,30

CODE R325X50162002

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
325	50	40	16,20	2,30



RUBBER WHEELS FOR SEEDERS MACHINERY

CODE R325X50PP54001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
325	50	40	P 16,20	2,30



CODE R325X50168003

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
325	50	40	16,80	3,70



CODE R325X50162004

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
325	50	40	16,20	3,70



CODE R310X25168001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
310	25	40	16,80	1,30



CODE R310X25162002

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
310	25	40	16,20	1,30



CODE R310X25162P005

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
310	25	40	P 16,20	1,30

CODE R310X25168003

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
310	25	40	16,80	2,70



CODE R310X25162004

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
310	25	40	16,20	2,70

CODE R318X50168001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
318	50	40	16,80	2,30



CODE R318X50162002

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
318	50	40	16,20	2,30



CODE R330X50168001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
330	50	40	16,80	3,00



CODE R330X50162002

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
330	50	40	16,20	3,00

CODE R330X65168001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
330	60	40	16,80	2,90



CODE R330X65162002

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
330	65	40	16,20	2,90

CODE R330X65T159003

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
330	65	30	T 15,90	2,90

RUBBER WHEELS FOR SEEDERS MACHINERY

CODE R340X50T159003

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
340	50	30	15,90	2,90

CODE R340X50I62002

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
340	50	40	16,20	2,90

CODE R340X50I68001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
340	50	40	16,80	2,90

CODE R380X65I200001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
380	65	47	20	4,30

CODE R250X55I200001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
250	55	42	20	1,70

CODE R250X42I200001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
250	42	42	20	1,20



CODE R410X8055030001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
410	80	55	30	7,70



CODE R410X6045030002

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
410	60	45	30	6,50



CODE R580X8065030001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
580	80	65	30	5,90

CODE R450X8065030002

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
450	80	65	30	3,70

CODE R300X1008020001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
300	100	80	20-25	5,00



CODE R300X100L8020002

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
300	100	80	20	5,10

CODE R300X100M551680003

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
300	100	55	16,80	5,10



CODE R300X100M551620004

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
300	100	55	16,20	5,10

RUBBER WHEELS FOR SEEDERS MACHINERY

CODE R300X1001002003

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
300	100	100	20	4,30

CODE R300X1001002504

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
300	100	100	25	4,30

CODE R280X10012020001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
280	100	120	20	4,80

CODE R280X65050001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
280	65	50	20	3,35

CODE R280X650700003

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
280	65	70	20	3,40

CODE R280X65LB50002

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
280	65	50	20	3,40

CODE R280X65LB70004

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
280	65	70	20	3,45



CODE R370X16518020001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
370	165	180	20	9,50



CODE R370X16516520002

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
370	165	165	20	9,50



CODE R250X1001025020001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
250	100	102,5	20	4,10



CODE R230X807020001

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
230	80	70	20	3,00




CODE R230X807025002


DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
230	80	70	25	3,00

CODE RCM000001-01

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
385	30	50	16,80	5,70

HOW TO REACH

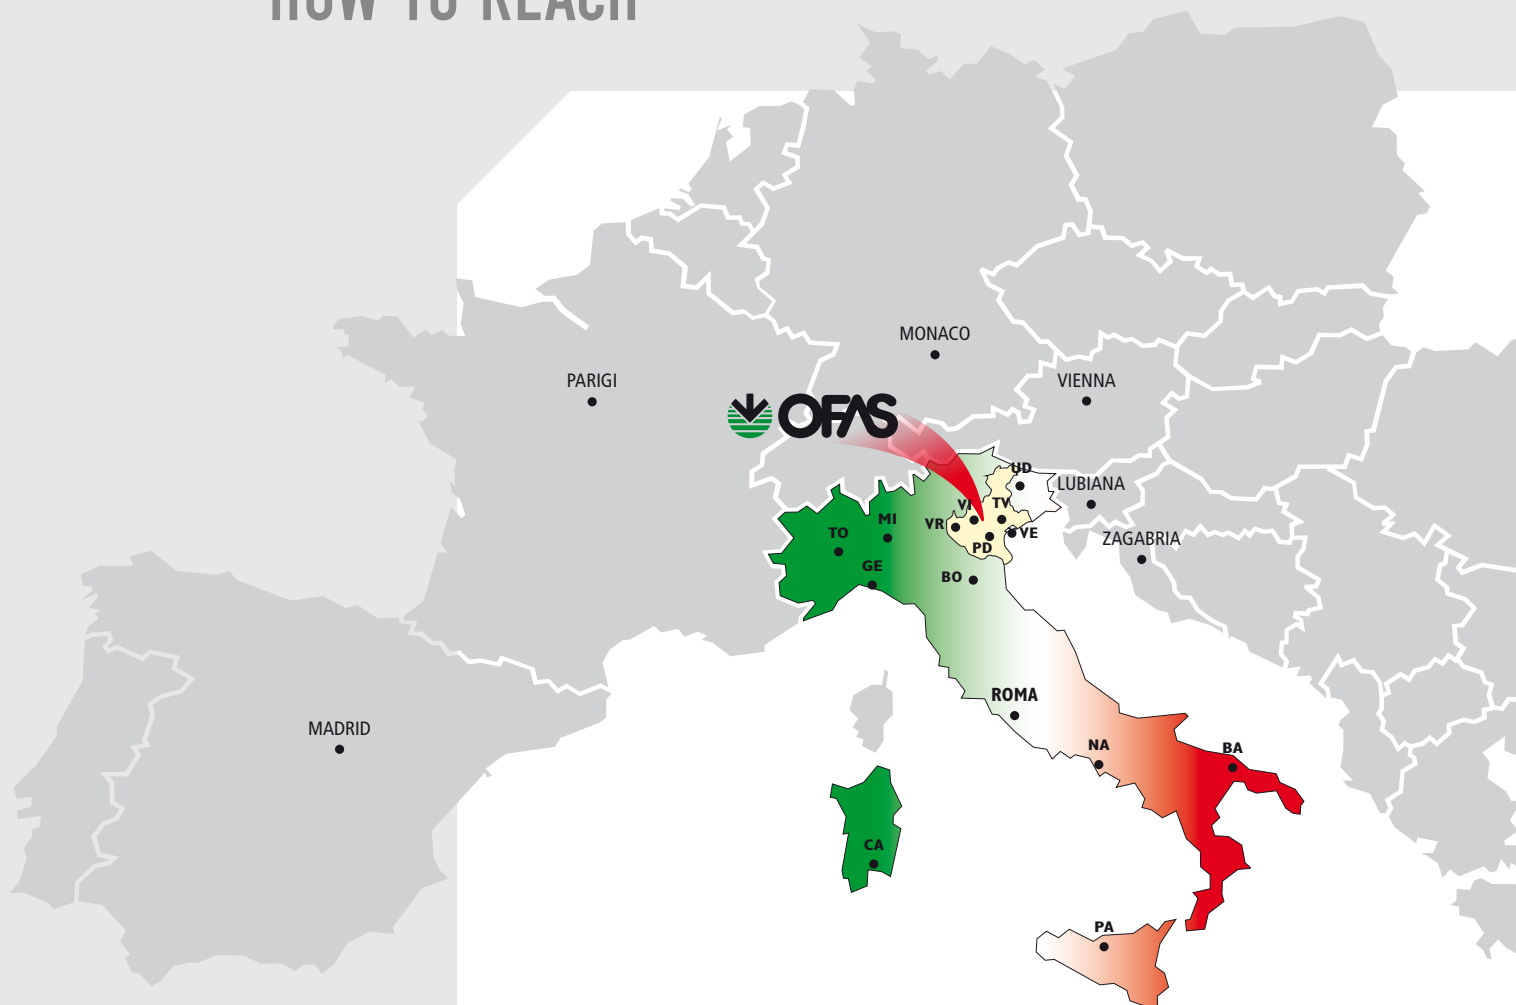

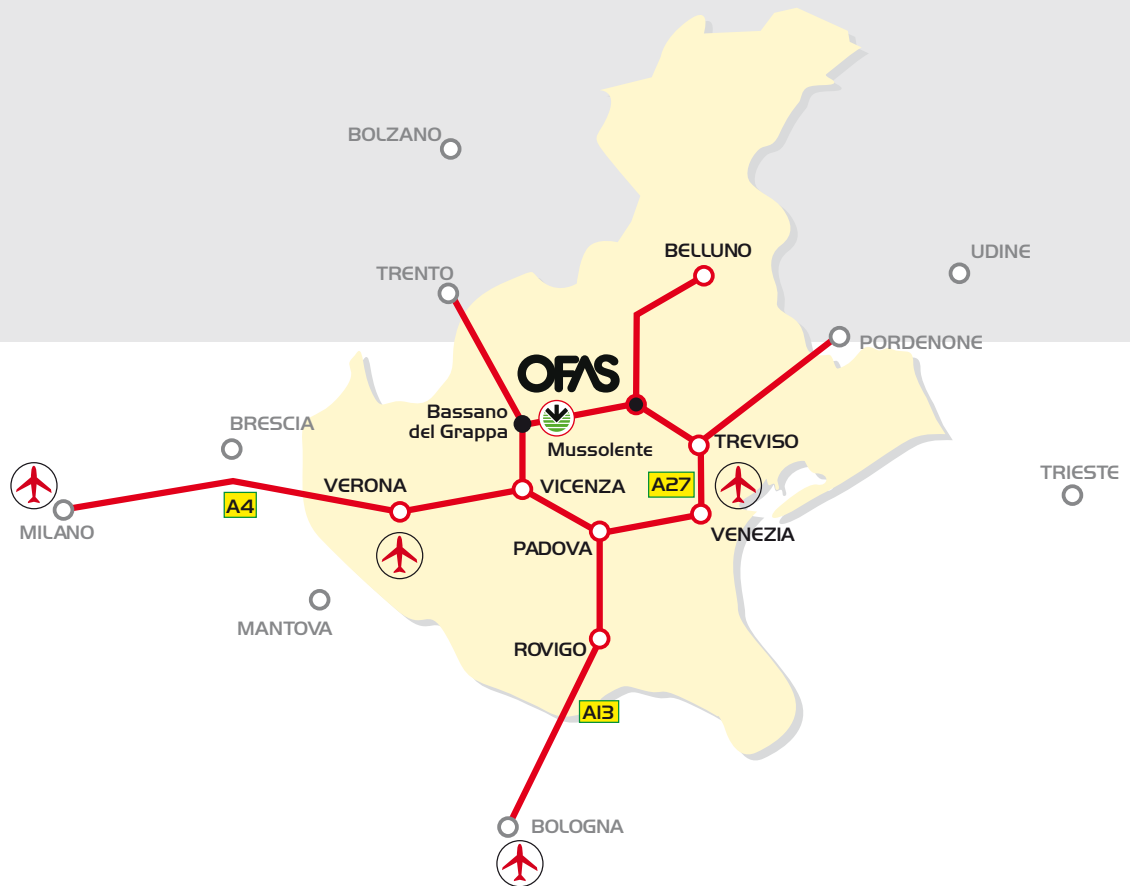

From MILANO: Highway Serenissima (A4) in Vicenza take highway Valdastico exit Dueville. Arterial road SS. 248 to Marostica expressway to Trento exit Bassano Est, follow the directions.

From BOLOGNA: Highway (A13) exit Padova - Limena. Arterial road SS. 47 to Cittadella - Bassano. Arterial road SS. 248 to Mussolente-Asolo, Montebelluna.

From VENEZIA: Arterial road SS. 13 to Treviso. Arterial road SS. 248 to Montebelluna - Asolo - Mussolente.

From TRENTO: Expressway to Bassano del Grappa. Exit Bassano Est, follow the directions.

AIRPORT: Venezia - Marco Polo, 60 Km. Treviso - S. Giuseppe, 30 Km. Verona Villafranca, 100 Km.





O.F.A.S spa

Via Dante Alighieri, 25
36065 Mussolente (VI) - Italy
T + 39 0424 577 222
F + 39 0424 577 159
www.ofas.it - info@ofas.it

Edition n. 6