



**TERRARUB<sup>®</sup>**

by  **OFAS**

 


made in Italy

**RUBBER WHEELS  
FOR SEEDERS**



# RUBBER WHEELS for SEEDERS

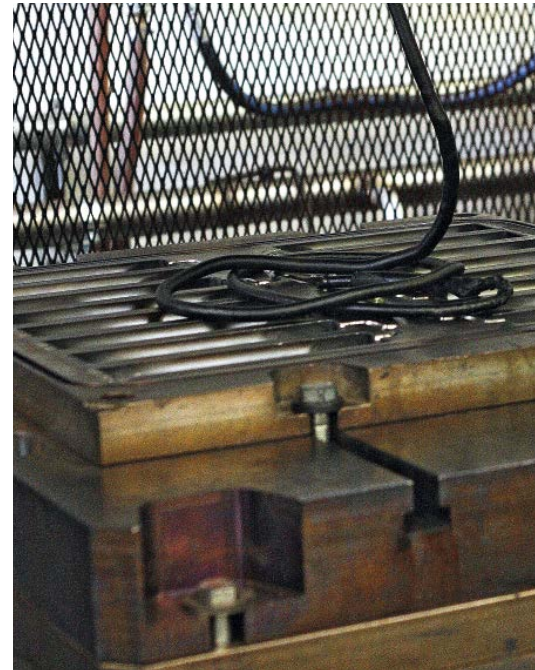





# Rubber Wheels for Seeders








# RUBBER WHEELS FOR SEEDERS

CODE R420X100LFF200022

RR000001

 DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
420	100	40	20,00	8,10

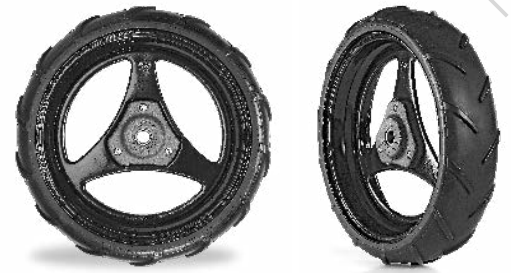

CODE R400X115FF1620020

RR000002


DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,20	7,40



CODE R400X115FF1680021

RR000003

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,80	7,40

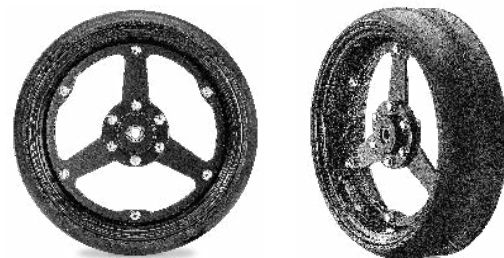 

CODE R400X115162012

RR000004

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	12,20	9,60



CODE R400X115168013

RR000005

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,80	9,60

CODE R400X1151620010

RR000006

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,20	9,80

CODE R400X1151680011

RR000007

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,80	9,80

**CODE R400X115168001**

**RR000008**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,80	7,00

**CODE R400X115162002**

**RR000009**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,20	7,00

**CODE R400X1151590010**

**RR000010**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	15,90	7,00



**CODE R400X115168003**

**RR000011**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,80	7,00

**CODE R400X115162004**

**RR000012**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,20	7,00



**CODE R400X115168008**

**RR000013**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,80	10,70

**CODE R400X115162009**

**RR000014**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	115	40	16,20	10,70





# RUBBER WHEELS FOR SEEDERS

CODE R400X65168005

RR000015

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	65	40	16,80	6,00

CODE R400X65162006

RR000016

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
400	65	40	16,20	7,00



CODE R350X9020001

RR000017

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
350	90	47	20	6,00

CODE R350X9020002

RR000018

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
350	90	47	20	6,00



CODE R325X50168001

RR000019

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
325	50	40	16,80	2,30

CODE R325X50162002

RR000020

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
325	50	40	16,20	2,30



CODE R325X50PP54001

RR000021

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
325	50	40	P 16,20	2,30





**CODE R325X50168003**

**RR000022**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
325	50	40	16,80	3,70



**CODE R325X50162004**

**RR000023**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
325	50	40	16,20	3,70



**CODE R310X25168001**

**RR000024**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
310	25	40	16,80	1,30



**CODE R310X25162002**

**RR000025**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
310	25	40	16,20	1,30

**CODE R310X25162P005**

**RR000026**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
310	25	40	P 16,20	1,30



**CODE R310X25168003**

**RR000027**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
310	25	40	16,80	2,70

**CODE R310X25162004**

**RR000028**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
310	25	40	16,20	2,70

# RUBBER WHEELS FOR SEEDERS

CODE R318X50168001

RR000029

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
318	50	40	16,80	2,30

CODE R318X50162002

RR000030

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
318	50	40	16,20	2,30



CODE R330X50168001


RR000031

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
330	50	40	16,80	3,00

CODE R330X50162002

RR000032

 DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
330	50	40	16,20	3,00

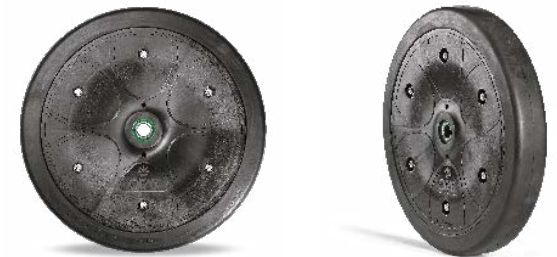

CODE R330X65168001

RR000033

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
330	65	40	16,80	2,90

CODE R330X65162002

RR000034

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
330	65	40	16,20	2,90





CODE R330X65T159003

RR000035

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
330	65	30	T 15,90	2,90



CODE R340X50T159003

RR000036

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
340	50	30	15,90	2,90



CODE R340X50162002

RR000037

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
340	50	40	16,20	2,90

CODE R340X50168001

RR000038

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
340	50	40	16,80	2,90

CODE R380X65200001

RR000039

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
380	65	47	20	4,30



# RUBBER WHEELS FOR SEEDERS

CODE R250X55020001

RR000040

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
250	55	42	20	1,70



CODE R250X42020001

RR000041

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
250	42	42	20	1,20






**CODE R410X8055030001**

**RR000042**

 DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
410	80	55	30	7,70

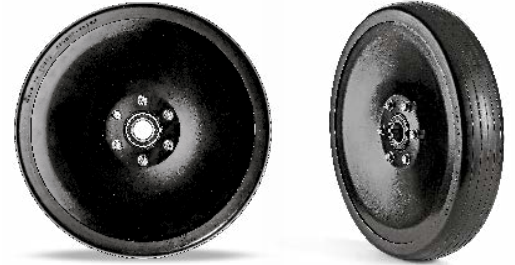

**CODE R410X6045030002**

**RR000043**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
410	60	45	30	6,50



**CODE R580X8065030001**

**RR000044**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
580	80	65	30	5,90

**CODE R450X8065030002**

**RR000045**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
450	80	65	30	3,70

# RUBBER WHEELS FOR SEEDERS

CODE R300X1008020001

RR000046

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
300	100	80	20-25	5,00



CODE R300X100R802002

RR000047

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
300	100	80	20	5,10



CODE R300X100RM55168003

RR000048

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
300	100	55	16,80	5,10



CODE R300X100RM55162004

RR000049

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
300	100	55	16,20	5,10

CODE R300X100R9020005

RR000050

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
300	100	90	20	5,20



**CODE R300X1001002003**

**RR000051**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
300	100	100	20	4,30



**CODE R300X1001002504**

**RR000052**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
300	100	100	25	4,30



**CODE R280X10012020001**

**RR000053**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
280	100	120	20	4,80



**CODE R280X65050001**

**RR000054**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
280	65	50	20	3,35

**CODE R280X650700003**

**RR000055**

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
280	65	70	20	3,40

# RUBBER WHEELS FOR SEEDERS

CODE R280X65LB50002

RR000056

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
280	65	50	20	3,40

CODE R280X65LB70004

RR000057

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
280	65	70	20	3,45

CODE R370X16518020001

RR000058

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
370	165	180	20	9,50

CODE R370X16516520002


RR000059

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
370	165	165	20	9,50

CODE R250X1001025020001

RR000060

 DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
250	100	102,5	20	4,10

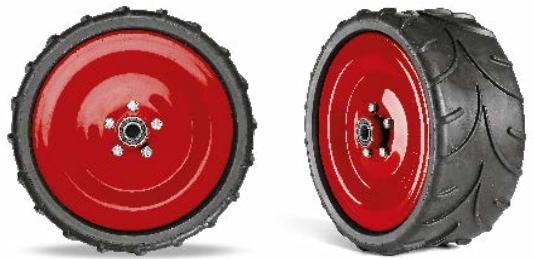



CODE R230X807020001

RR000061


DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
230	80	70	20	3,00



CODE R230X807025002

RR000062

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
230	80	70	25	3,00

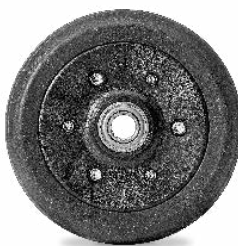 

CODE R200X6720001

RR000063

DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
200	67	75	20	1,90




CODE RCM000001-01

RR000064


DIAMETER	WIDTH	HUB	BEARING	WEIGHT
mm	mm	mm	mm	kg
385	30	50	16,80	5,70



# HOW TO REACH

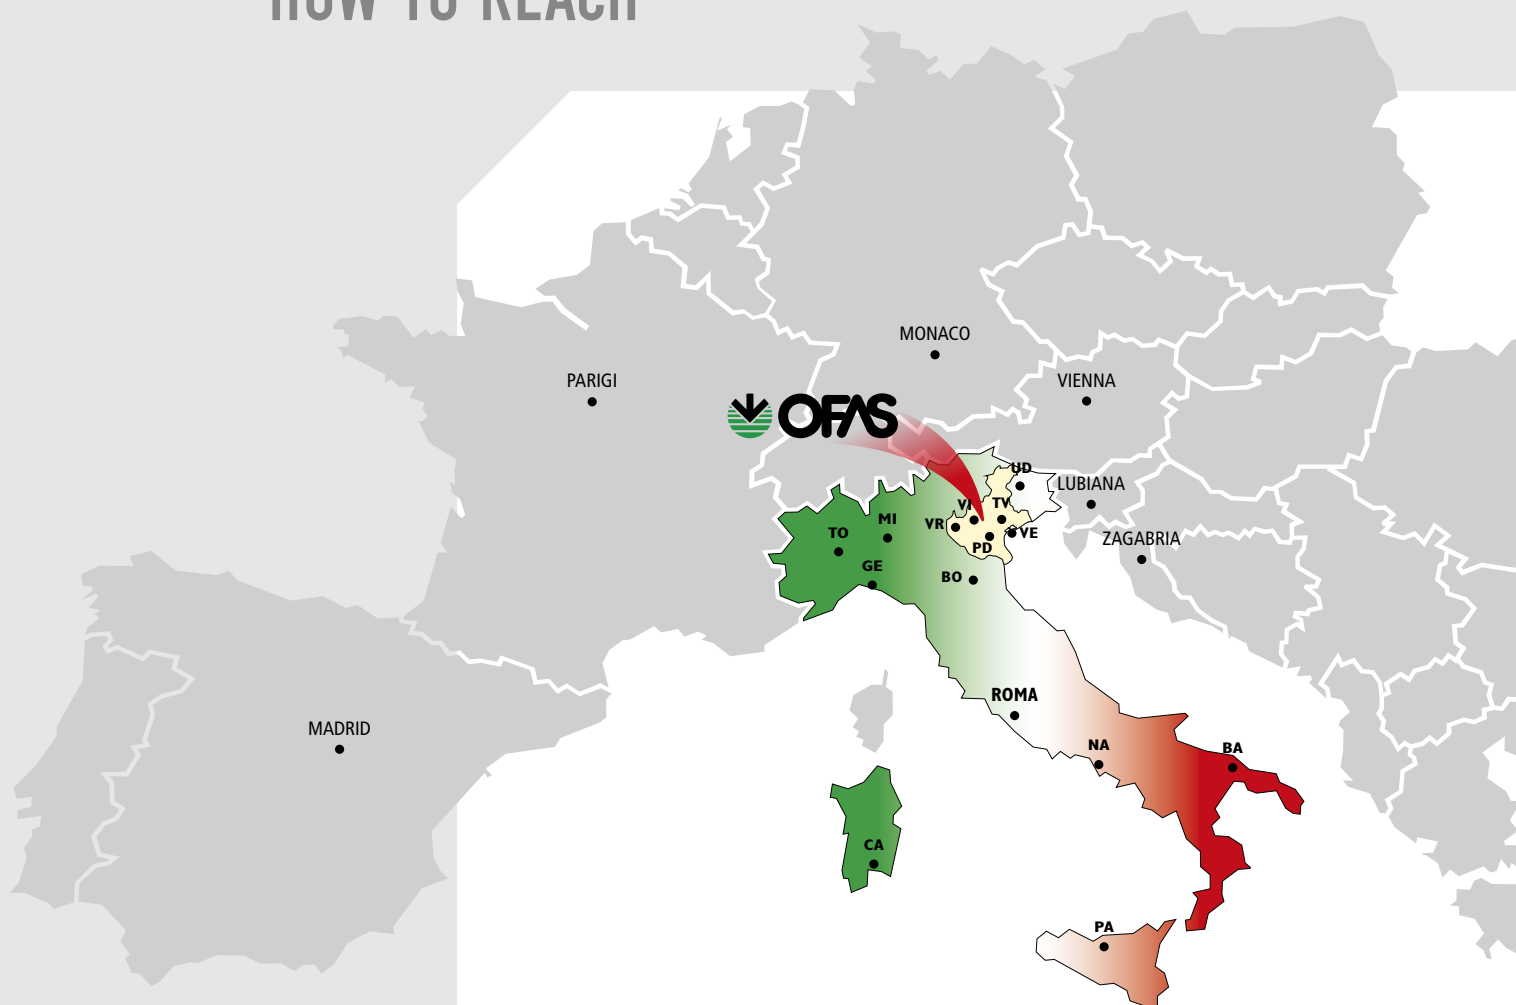 



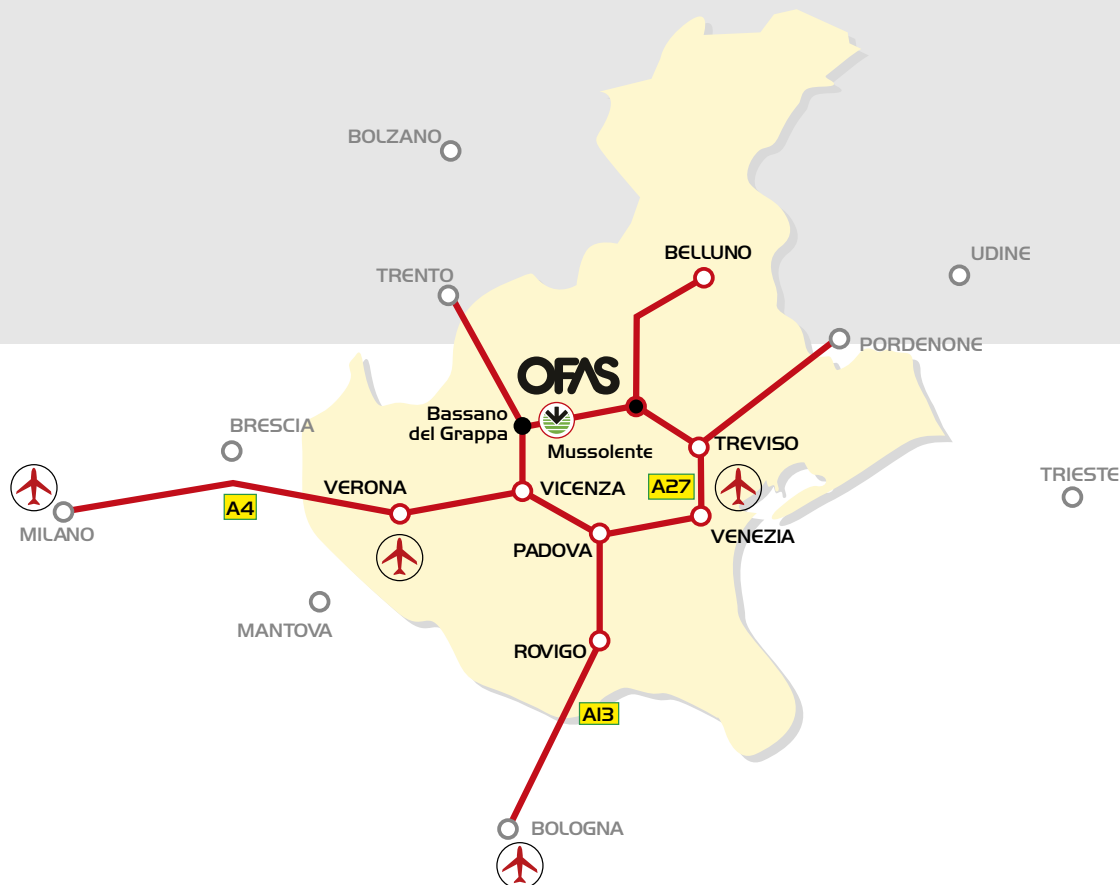 

**From MILANO:** Highway Serenissima (A4) in Vicenza take highway Valdastico exit Dueville. Arterial road SS. 248 to Marostica expressway to Trento exit Bassano Est, follow the directions.

**From BOLOGNA:** Highway (A13) exit Padova - Limena. Arterial road SS. 47 to Cittadella - Bassano. Arterial road SS. 248 to Mussolente-Asolo, Montebelluna.

**From VENEZIA:** Arterial road SS. 13 to Treviso. Arterial road SS. 248 to Montebelluna - Asolo - Mussolente.

**From TRENTO:** Expressway to Bassano del Grappa. Exit Bassano Est, follow the directions.

**AIRPORT:** Venezia - Marco Polo, 60 Km. Treviso - S. Giuseppe, 30 Km. Verona Villafranca, 100 Km.





**O.F.A.S spa**

Via Dante Alighieri, 25  
36065 Mussolente (VI) - Italy  
T + 39 0424 577 222  
F + 39 0424 577 159  
[www.ofas.it](http://www.ofas.it) - [info@ofas.it](mailto:info@ofas.it)

Edition n. 7